

PRODUCT CODE 1C03

# Tractor Emulsion Shyne Advanced

Asian paints Tractor shyne Advanced is an interior paint that comes with twin power and provides a durable and smooth sheen finish to your walls.

# PRODUCT BENEFITS

performance warranty.



Tractor Emulsion Shyne Advanced offers anti-fade protection which translates to long-lasting color, reduced maintenance and best in class durability.

4 Years Warranty
Tractor Emulsion Shyne Advanced comes with 4 years of



#### **Superior Hiding**

Tractor Emulsion Shyne Advanced offers superior washability than distemper, making it easy to keep your walls looking the best.








# **PRODUCT FEATURES**

# WASHABILITY



### **COLOURS AVAILABLE**


\*Currently available in more than 800 shades as per the Asian Paints Colour Cosmos.



# **FINISH**



### **COVERAGE**

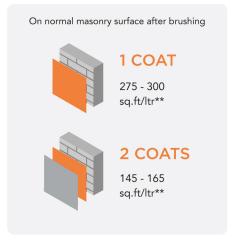

\*\*Actual coverage may vary from the quoted coverage due to factors such as method and condition of application and surface roughness and porosity.

# **AVAILABLE PACKS**



Shelf life: 4 years from date of manufacture in original tightly closed containers away from direct sunlight and excessive

# **HOW TO APPLY**

# PRE PAINTING STEPS



**PLASTER** New masonry surfaces must be allowed to cure completely. It is recommended to allow 28 days as the curing time for new masonry surfaces.

**CLEANING** Surface should be free from any loose paint, dust or grease. Growths of fungus, algae or moss should be removed by wire brushing and water. In case of areas having excessive dampness use Asian Paints DampBlock to limit further dampness.

FILLING FOR CRACKS For filling cracks upto 3mm use Asian Paints SmartCare Exterior Sealer.

# **FILLING FOR HOLES & DENTS**

In case of dents and holes use Asian Paints Acrylic Wall Putty or white cement and fine sand in the ratio 1:3

For interior surfaces or substrates that are subjected to continuous seepage or dampness, kindly use Asian Paints SmartCare Damp Block before the top coat application.

# **PAINT APPLICATION PROCESS**

| APPLICATION   | CODE  | THINNER      | DILUTION %              | APPLICATION VISCOSITY <sup>1</sup>   | RECOATING<br>PERIOD <sup>2</sup> |
|---|---|--------------|-------------------------|--|----------------------------------|
| STEP 1<br>SANDING   | SAND THE SURFACE WITH TRUSTAR SAND PAPER 180 AND WIPE CLEAN |              |                         |  |                                  |
| STEP 2 TRUCARE SPARC INTERIOR WALL PRIMER TRUCARE INTERIOR WALL PRIMER BRUSH / ROLLER / SPRAY   | 1A01<br>0360  | <b>WATER</b> | 100 %                   | BRUSH / ROLLER 30 - 40<br>SPRAY 20 - 25<br>BRUSH / ROLLER 30 - 40<br>SPRAY 20 - 25 | 4 - 6 HRS                        |
| STEP 3 ACRYLIC WALL PUTTY PUTTY KNIFE   | 1354  | <b>WATER</b> | BASED ON<br>REQUIREMENT | N/A  | 4 - 6 HRS                        |
| STEP 4<br>SANDING   | SAND THE SURFACE WITH TRUSTAR SAND PAPER 180 AND WIPE CLEAN |              |                         |  |                                  |
| STEP 5 TRUCARE SPARC INTERIOR WALL PRIMER TRUCARE INTERIOR WALL PRIMER BRUSH / ROLLER / SPRAY   | 1A01<br>0360  | <b>WATER</b> | 100 %                   | BRUSH / ROLLER 30 - 40<br>SPRAY 20 - 25<br>BRUSH / ROLLER 30 - 40<br>SPRAY 20 - 25 | 4 - 6 HRS                        |
| STEP 6<br>TRUSTAR SANDING   | SAND THE SURFACE WITH TRUSTAR SAND PAPER 180 AND WIPE CLEAN |              |                         |  |                                  |
| STEP 7 FIRST COAT TRACTOR EMULSION SHYNE ADVANCED BRUSH / ROLLER / SPRAY STEP 8 FIRST COAT TRACTOR EMULSION SHYNE ADVANCED BRUSH / ROLLER / SPRAY | 1C03  | <b>WATER</b> | 40% - 45%               | BRUSH / ROLLER 30 - 35<br>SPRAY 22 - 25  | 4 HRS                            |
|   | 1C03  | <b>WATER</b> | 40% - 45%               | BRUSH / ROLLER 30 - 35<br>SPRAY 22 - 25  | 4 HRS                            |
|   |   |              |                         |  |                                  |

- 1. As measured through a Ford cup.
  2. Recoat period is quoted for 25°C and 50% Relative Humidity, these may vary under different conditions.





# **HOW TO CHOOSE COLOURS**

Browse through Asian Paints colour tools to help you find the right colour combination

**COLOUR COSMOS\*** 

**COLOUR WITH ASIAN PAINTS** 

Visualize colour on your walls with

**Asian Paints** 

TRACTOR WALL FINISHES SHADE CARD











\*These shades are for reference only. Please refer to the Colour Cosmos or Colour Palette for correct shade reference.

# **ADDITIONAL INFORMATION**

# **POST PAINTING CARE**

For removing stains, clean the surface using sponge with a mild soap solution. Once you finish, wipe the surface clean. Ensure drying time of 1 week for the paint before cleaning.

# **TECHNICAL DETAILS**

- a. Drying time: Surface dry time 30 minutes
- b. Sheen levels: 5 8 at 60° GH
- c. Flash point IS101/1987 Part 1, Sec 6: NA
- **d. Stability of thinned paint:** To be used within 24 hours

# **PRECAUTIONS**

- > Do not apply when ambient temperature is less than 10°C or if the temperature might drop to this level within 4 hours of application.
- > Do not over-thin or over-extend the brush.
- > Tint using Asian Paints machine colourants only.
- > Stir well and strain before use.
- > Tinted paints need thorough shaking immediately after tinter addition as well as before use.

### **SAFETY FEATURES**

- > Kindly refer to the MSDS for Asian Paints Tractor Emulsion Shyne Advanced which gives detailed information on safety measures while handling the paint, which is available on request.
- > Store the container with the lid tightly closed in an upright position, in a cool, dry place
- Keep out of reach of children and away from eatables.
- > May be harmful if swallowed. In case of ingestion seek immediate medical attention.
- > Wear eye protection during application. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.
- In case of skin contact immediately wash skin with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not breathe vapour or spray. It is recommended to wear suitable nose pad during sanding and surface preparation to avoid dust inhalation.
- > Do not pour leftover paint down the drain or in water courses.
- > In the event of spills, contain spillage using sand or earth.
- > No added Lead, Mercury or Chromium compounds.

<sup>\*</sup>Please refer to the warranty documents for the product at the Asian Paints Website for further information.