

PRODUCT CODE 0013

## Tractor Aqualock

Tractor Aqualock is an water-based, interior wall paint. It is an acrylic paint that provides twice the water resistance as compared to ordinary distempers. It also gives the walls a beautiful matt finish that lasts for a long time.



### PRODUCT BENEFITS

#### Finish


Asian Paints Tractor Aqualock gives a smooth finish that is better than distemper products.

#### Acrylic Co-polymer Formulation

It is a specially developed formulation designed to provide superior water resistance property and long lasting finish.

#### Colour

It is available in a wide range of 1200+ bright and attractive shades.




**LEAD FREE\* GUARANTEE**




\* All Asian Paints products contain no added Lead, Mercury, Arsenic or Chromium from April 2008.

### PRODUCT FEATURES

#### WASHABILITY

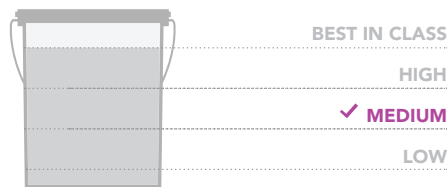


#### AVAILABLE PACKS

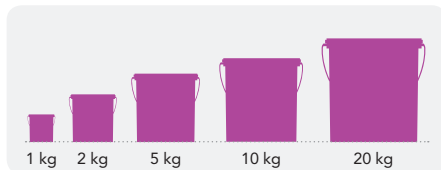

Shelf life: 2 years from date of manufacture in original tightly closed containers away from direct sunlight and excessive heat.


#### COLOURS AVAILABLE

# 1200+\*

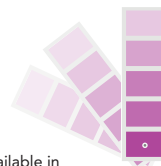

\*Asian Paints Tractor Aqualock is available in over 1200+ shades and snow white

#### FINISH

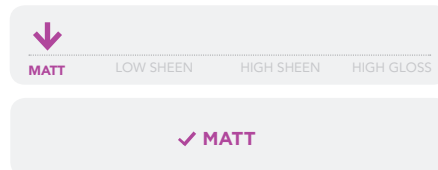

#### COVERAGE

On smooth primed masonry surface



**1 COAT**

190 - 210 sq.ft/kg\*\*




**2 COATS**

85 - 115 sq.ft/kg\*\*

\*\*Actual coverage may vary from the quoted coverage due to factors such as method and condition of application and surface roughness and porosity.

### HOW TO APPLY

#### PRE PAINTING STEPS

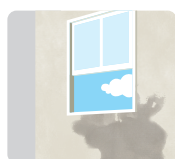

**PLASTER** New masonry surfaces must be allowed to cure completely. It is recommended to allow 28 days as the curing time for new masonry surfaces.



**CLEANING** Surface should be free from any loose paint, dust or grease. Growths of fungus, algae or moss should be removed by wire brushing and water. In case of areas having excessive dampness use Asian Paints SmartCare Damp Block to limit further dampness.



**FILLING FOR CRACKS** For filling cracks upto 3mm use Asian Paints SmartCare Crack Seal.



**FILLING FOR HOLES & DENTS** In case of dents and holes use Asian Paints Acrylic Wall Putty or white cement and fine sand in the ratio 1:3

**Asian Paints Tractor Aqualock should not be applied on surfaces / substrates that are subjected to continuous seepage or dampness.**

#### PAINT APPLICATION PROCESS

APPLICATION	CODE	THINNER	DILUTION %	APPLICATION VISCOSITY <sup>1</sup>	RECOATING PERIOD
STEP 1 SANDING					
SAND THE SURFACE WITH SAND PAPER 180 AND WIPE CLEAN					
0359	MTO*	BRUSH / ROLLER 8 - 10 SPRAY 15 - 20	BRUSH / ROLLER 30 - 40 SPRAY 20 - 25	6 - 8 HRS	
0360	WATER	80% - 100 %	BRUSH / ROLLER 30 - 40 SPRAY 20 - 25	4 - 6 HRS	
1354	WATER	SMALL AMOUNTS TO IMPROVE FLOWABILITY	N/A	4 - 6 HRS	
STEP 2 SANDING					
SAND THE SURFACE WITH SAND PAPER 180 AND WIPE CLEAN					
0359	MTO*	BRUSH / ROLLER 8 - 10 SPRAY 15 - 20	BRUSH / ROLLER 30 - 40 SPRAY 20 - 25	6 - 8 HRS	
0360	WATER	80% - 100 %	BRUSH / ROLLER 30 - 40 SPRAY 20 - 25	4 - 6 HRS	
STEP 6 SANDING					
SAND THE SURFACE WITH SAND PAPER 320 AND WIPE CLEAN					
0013	WATER	BRUSH 60 - 65 SPRAY 60 - 65	BRUSH 20 - 25	3 - 4 HRS	
0013	WATER	BRUSH 60 - 65 SPRAY 60 - 65	BRUSH 20 - 25	3 - 4 HRS	

1. As measured through a Ford cup. 2. Recoat period is quoted for 25°C and 50% Relative Humidity, these may vary under different conditions. \* Mineral Turpentine Oil


## HOW TO CHOOSE COLOURS

Browse through Asian Paints colour tools to help you find the right colour combination

COLOUR SPECTRA FAN DECK



TRACTOR WALL FINISHES SHADE CARD

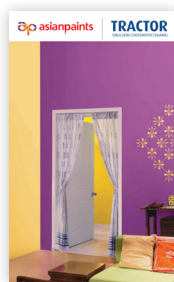

## ADDITIONAL INFORMATION

### POST PAINTING CARE

For removing stains, wipe clean with a wet cloth. Ensure a drying time of minimum 2 weeks from application before cleaning.

### TECHNICAL DETAILS

- a. Drying time:** Surface dry time 30 min
- b. Flash point IS101/1987 Part 1, Sec 6:** Non-flammable
- d. Stability of thinned paint:** To be used within 24 hours

### PRECAUTIONS

- > Do not apply when ambient temperature is less than 10°C or if the temperature might drop to this level within 4 hours of application.
- > Do not over-thin or over-extend the brush.
- > Tint using Asian Paints machine colourants only
- > Stir well and strain before use.
- > Tinted paints need thorough shaking immediately after tinter addition as well as before use.

### SAFETY FEATURES

- > Kindly refer to the MSDS for Asian Paints Tractor Aqualock which gives detailed information on safety measures while handling the paint, which is available on request.
- > Store the container with the lid tightly closed in an upright position, in a cool, dry place
- > Keep out of reach of children and away from eatables.
- > May be harmful if swallowed. In case of ingestion seek immediate medical attention.
- > Wear eye protection during application. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.
- > In case of skin contact immediately wash skin with soap and plenty of water. Get medical attention if irritation develops or persists.
- > Do not breathe vapour or spray. It is recommended to wear suitable nose pad during sanding and surface preparation to avoid dust inhalation
- > Do not pour leftover paint down the drain or in water courses.
- > In the event of spills, contain spillage using sand or earth.
- > No added Lead, Mercury or Chromium compounds.